

Quick Setup Guide

FAX-T104, FAX-T106
THANK YOU!

 
... FOR PURCHASING YOUR BROTHER MACHINE.
WE ARE SURE YOU WILL BE IMPRESSED WITH THE CONVENIENT WAY
THAT YOUR NEW MACHINE HANDLES YOUR FAXING NEEDS!

To get started quickly, follow these simple instructions in numerical
order.

For greater detail and a full explanation of other useful features, consult your
User's Guide.

1 Packing List

Make sure you have the items shown below.

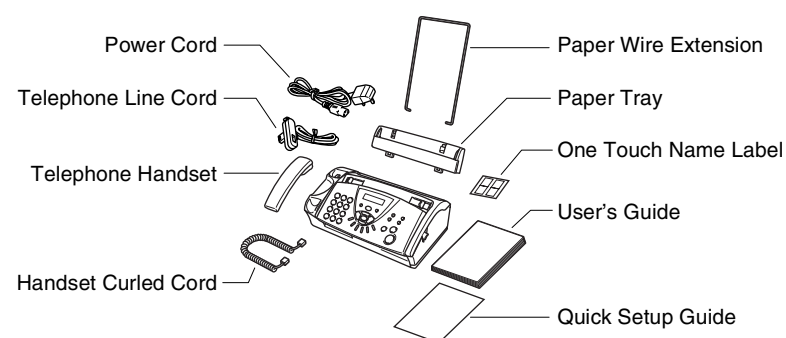


To help you get your fax machine working from the outset, we have
included a free starter ribbon (print cartridge) giving you up to 30 pages
of print.

! Keep the packing materials for possible future transport. If you do
not pack the machine properly, it could damage your fax and may
void your warranty.


2 Attach the paper wire extension and paper tray

 1. Attach the paper wire
extension.

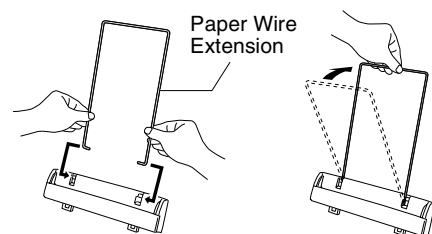

2. Attach the paper tray.

 Make sure the wide pins
on the paper tray are
inserted firmly into the
pockets on the top edge
of your machine.

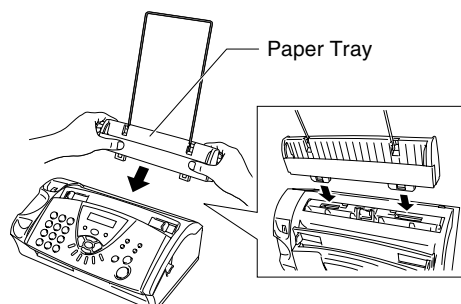


3 Load the Paper

Place up to 30 (64 g/m² - 90 g/m²)
sheets of paper in the paper tray.
Gently insert paper.

The side to be printed on must be face
down.

 Tap the stack of paper
so the edges are even.

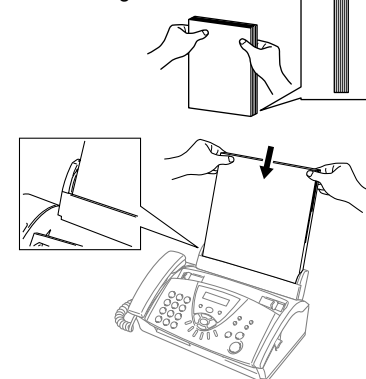


Acceptable Paper

Size: A4

Weight: 64 to 90 g/m²


Thickness: 0.08 to 0.12 mm

 4 Connect the handset, power cord and telephone line cord

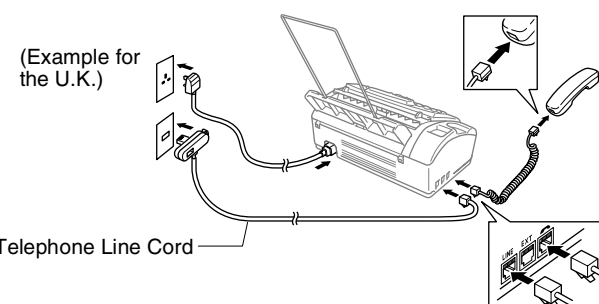

1. Connect the handset.
2. Connect the power cord to the machine.
3. Plug the power cord into an electrical socket.
4. Connect the telephone line cord to the machine in the socket marked
LINE.

 5 If you are sharing one phone line with an external telephone answering device, connect it now as shown below.

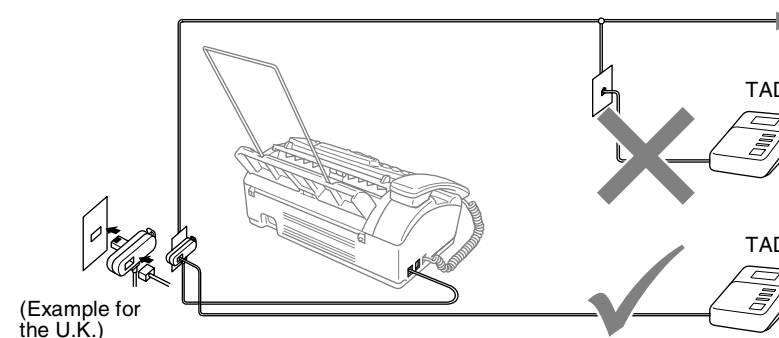

For more details, see Chapter 1, "Connecting an External Telephone
Answering Device (TAD)" in the User's Guide.

6 Set Date and Time

1. Press **Menu/Set**, 1, 1.
2. Enter the last two digits of the year, and
then press **Menu/Set**.
3. Enter two digits for the month, and then
press **Menu/Set**.
4. Enter two digits for the day, and then
press **Menu/Set**.
5. Enter the time in 24-hour format, and
then press **Menu/Set**.
6. Press **Stop/Exit**.

1. DATE/TIME

ENTER YEAR: 20--

ENTER MONTH: --

ENTER DAY: --

ENTER TIME: --:--

7 Set Station ID

1. Press **Menu/Set**, 1, 3.
2. Enter your fax number (up to 20 digits),
and then press **Menu/Set**.
3. Enter your telephone number (up to 20
digits), and then press **Menu/Set**.
4. Enter your name (up to 20 characters)
using the dial pad and the chart, and
then press **Menu/Set**.

To enter a space press ▶
twice.

5. Press **Stop/Exit**.

3. STATION ID

FAX: _____

TEL: _____

NAME: _____

| Press Key | once | twice | three times | four times | five times |
|-----------|------|-------|-------------|------------|------------|
| 2 | A | B | C | 2 | A |
| 3 | D | E | F | 3 | D |
| 4 | G | H | I | 4 | G |
| 5 | J | K | L | 5 | J |
| 6 | M | N | O | 6 | M |
| 7 | P | Q | R | 7 | P |
| 8 | T | U | V | 8 | T |
| 9 | W | X | Y | 9 | W |

8 Select Receive Mode

Choose the mode that best suits your needs by pressing **Receive Mode**
repeatedly until the screen displays the setting you want to use.

- FAX ONLY** For use with a dedicated fax line. Every call
is answered as a fax.
- FAX/TEL** For receiving fax and voice calls on one line.
- TAD: ANSWER MACH.** (FAX-T104 only) For use with an external
answering device. The TAD answers every
call and stores voice messages. Fax
messages are printed.
- MANUAL** For receiving fax and voice calls on one line.
You control the phone line and must answer
every call yourself.
- Once an Outgoing message has been recorded, you can choose the
mode below by pressing (⏏) until it lights. (FAX-T106 only)
- TAD: MSG MGR** A built-in answering machine answers every
call and stores voice and fax messages. For
details, see Chapter 9 of the User's Guide.

For more details, see Chapter 5, "Choosing the Receive Mode" in the
User's Guide.

